

# MOD 25 SUPERCHARGER

PART CODE	PART LIST
311	FRONT SIGHT
331	BARREL COVER
332	BARREL EXTENTION
349	COVER O-RING
452	COCKING LEVER PIN
453	SIDE WASHER_METAL
454	SIDE WASHER_PLASTIC
456	AIR JOINT
462	LOCKING TAB
471	PLUNGER SEAL
484	PLUNGER
495	SPRING FOLLOWER COVER
503	SPRING FOLLOWER PIN
508	M6 NUT
509	SPRING FOLLOWER WASHER
511	FASTENING SCREW
512	MAIN SCREW
520	COCKING LEVER
530	LOCKING TAB PIN
536	MAIN SPRING
587	HAMMER
589	SAFETY LEVER SCREW
590	SAFETY LEVER BUSH
591	TRIGGER CONNECTION PIN
592	LOCKING TAB SPRING
615	RECEIVER
374-1	BARREL_4,5 CAL
374-2	BARREL_5,5 CAL
<hr/>	
737	SLEED
739	PISTOL GRIP
744	STOCK SPRING
765	M5 KNURL WASHER
782	STOCK SCREW
784	REAR SCREW
799	PISTOL GRIP SIDE PLASTIC_LEFT
800	PISTOL GRIP SIDE PLASTIC_RIGHT
801	PISTOL GRIP BUSH
802	PISTOL GRIP BUSH SCREW
<hr/>	
131	SEAR 1
132	SEAR 1 PIN
133	SEAR 2 PIN
134	SEAR 2
135	TRIGGER CASE
136	SEAR 3 SPRING
137	SEAR 3
139	TRIGGER SCREW
140	TRIGGER
141	SAFETY
142	CLIPS
143	SAFETY PIN

144	SAFETY BALL
145	SAFETY SPRING
147	BUSH
148	SEAR 1 SPRING
	
201	REAR SIGHT PIN
203	ELEVATOR SCREW
204	REAR SIGHT BALL
205	SIDE ELEVATOR
206	REAR SIGHT SCREW
208	REAR SIGHT CLEAT
210	MAIN BODY
211	REAR SIGHT SUB-PLASTIC
218	REAR SIGHT HEAD
231	M3 NUT
511	FASTENING SCREW
130	TRIGGER GROUP (ASSEMBLED)
230	REAR SIGHT (ASSEMBLED)
819	SUPERCHARGER STOCK (ASSEMBLED)