


INSTRUCTIONS FOR USE

- Check the Battery is in place.
- Turn the ON/OFF volume control from low level and LED light will flash.
- Turn volume control to suitable level.
- Place eartip inside cover ear phone and hanger.
- Insert unit deep inside your ear.
- After use, take out unit from ear, and turn volume control at lowest level. When LED is extinguish means unit is OFF.

EARTIP & HANGER


Three different size EARTIPS can be changed to suitable your ear.

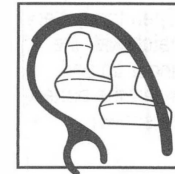

ON / OFF VOLUME

The correct positions of the switch are as shown beside.

The volume should be turned to the "0" position when not in use. This will ensure longer battery life.

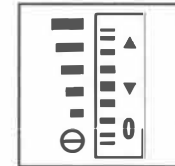


VOLUME CONTROL

There are volume control from LOW to HIGH. LED will flash.





BATTERY INSTALLATION

Open the battery hatch with the finger tip and insert the battery as shown.

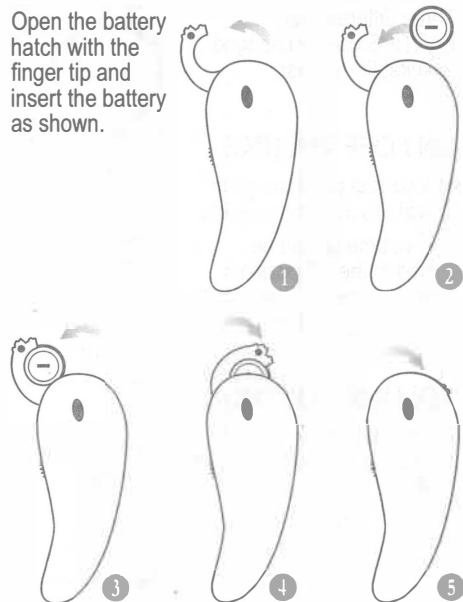

CORRECT METHOD OF USE

1. Adjust VOLUME CONTROL at a suitable level.
2. Make sure user EARTIP is tightly inserted onto the unit. Insert the unit deep inside of ear.
3. Use your finger to control and adjust volume at suitable level.
4. Increase the volume control very gradually to avoid any sudden increase in sound.
5. After use, turn the VOLUME CONTROL to "0" position.

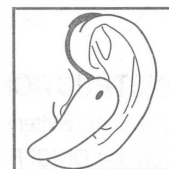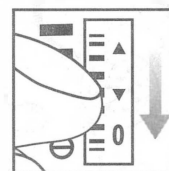

CAUTION

1. The products is not waterproof, therefore you must take care to prevent water form entering the unit. Should water enter theunit, remove the battery and place the unit in a warm place to dry.
2. It is important to increase the volume control very gradually to avoid any sudden increase in sound.
3. The product is not a medical device.

TECHNICAL SPECIFIC

Battery Life time	>120 Working Hours (LR44 1PC)
Operating Current	<2.5 mA
Operating Voltage range	1.0~1.6 V
Frequency Band Width	100~5K(Hz) + 5 dB
SSPL90 dB	125 dB
Full-on Gain dB	>50 dB